


Pivaset

Patruunapolku 5
79100 Leppävirta, Finland
tel. +358 207 579 360
fax. +358 207 579 366
info@pivaset.fi
www.pivaset.fi

Changing the direction of door opening:

- Lift the reel out of the cabinet.
 - Move the reel bracket screws to the opposite side.
 - Lift the reel back in place on the door.
 - Adjust the door so that there is a sufficient space between the door bottom and the cabinet frame.
- The hinges are adjustable with hex key from inside the door.

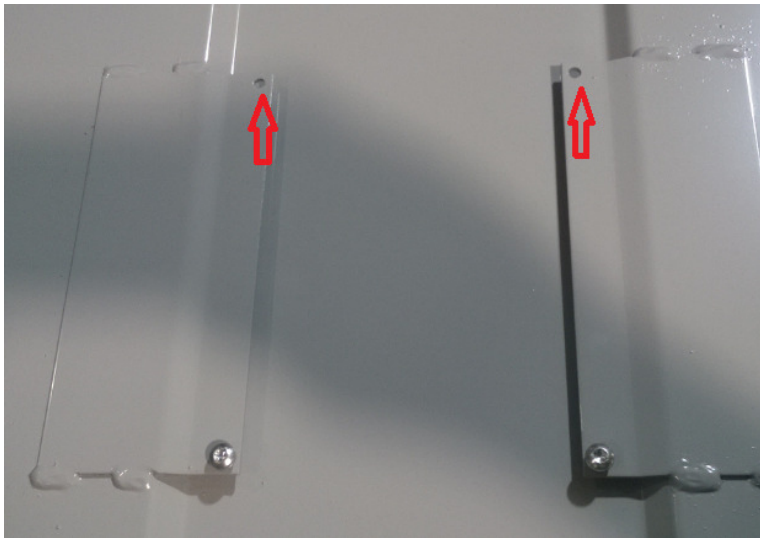

Pivaset

Patruunapolku 5
79100 Leppävirta, Finland
tel. +358 207 579 360
fax. +358 207 579 366
info@pivaset.fi
www.pivaset.fi

Changing the reel operating direction:

- Pull the hose all the way out from the reel.
- Remove the cotter pin and remove the goose neck from the reel hub.
- Turn the goose neck 180° and set it back. Install the cotter pin.
- Rewind the hose back to the reel.
- Replace the jet tube bracket location to the opposite side and place the jet tube to bracket.

